

Connecting Intermec/Honeywell Printers to Windows 7 via USB

The following instructions are for all DPAS supported Intermec printers.

The Intermec/Honeywell InterDriver EasyCoder PD42 (203 dpi) - IPL driver has been tested and recommended for DPAS use. This driver will support all Intermec/Honeywell printers approved by DPAS.

Please visit the **Support** > **Software and Hardware** section of the <u>DPAS Support Web Site</u> for a listing of approved DPAS printers.

Downloading Driver Files

- 1. In your browser, navigate to https://www.honeywellaidc.com/products/printers/software
- 2. Choose Run.



3. If you receive a security warning, click **Run**.







4. Select the I accept the terms in the license agreement radio button and choose the Next button.

Intermec InterDriver 7
License Agreement
Prease read the following incense agreement carefully.
INTERMEC END USER LICENSE AGREEMENT
1.0 DEFINITIONS
1.1 "Software" means the computer program(s) acquired from Intermec or any Revisions thereto. This may include programs written by Intermec as well as operating
 I accept the terms in the license agreement I do not accept the terms in the license agreement
< Back Next > Cancel





5. Leave the Installation Directory at its default and select the Next button.

Intermec InterDriver 7		×		
Installation	Installation Directory Please select the directory to unpack the software.			
The software will be un either type in the new p	packed to the directory listed below. To unpack to a d bath or click Browse to select a different directory.	ifferent directory,		
Installation Directory:	C:\Intermec\InterDriver7	Browse		
	Space required on drive:	36.6 MB		
	Space available on selected drive:	49.6 GB		
	< <u>B</u> ack Next >	Cancel		





6. Deselect the **Read installation instructions** checkbox and choose the **Finish** button.

Intermec InterDriver 7	x
Installation Information Follow the instructions below to install the software.	
- Instructions	_
Options Sead installation instructions (contained in "Installation_Instructions.html")	
< <u>B</u> ack Finish Cancel	

7. Once all files are installed, the **Seagull Driver Wizard** will display.





Installing using the Seagull Driver Wizard

If you are not continuing from the initial download of the InterDriver, navigate to C:\Intermec\InterDriver7 and launch DriverWizard.exe.

1. Select Install Print Drivers radio button and choose the Next button.

Seagull Driver Wizard	×
	Welcome to the Seagull Driver Wizard This wizard helps you install and remove printer drivers.
	What would you like to do? Install printer drivers Upgrade printer drivers Remove printer drivers
	< Back Next > Cancel





2. Select EasyCoder PD42 (203 dpi) – IPL from the Printer Model and choose the Next button.

Seagull Driver Wizard	<u> </u>
Specify Printer Model The manufacturer and model determine which printer driver to use.	,
Specify the model of your printer.	
Printer Model EasyCoder PD42 (203 dpi) - DP EasyCoder PD42 (203 dpi) - IPL EasyCoder PD42 (203 dpi) - IPL EasyCoder PD42 (300 dpi) - DP EasyCoder PD42 (300 dpi) - ESim EasyCoder PD42 (300 dpi) - IPL EasyCoder PD42 (300 dpi) - IPL EasyCoder PF2i (203 dpi) - DP	
Source: C:\Intermec\InterDriver7 Version: 7.2.4 M-0 (01/16/2012)	





3. Select the USB port the printer is connected to (usually USB001) and choose the **Next** button.

Seagull Driv	er Wizard		X
Specify A po	Port rt is used to connect a printer to t	ne computer.	Ì
Specify t not listed	he port that you are using. If you I below, create a new port.	are connecting using TCP/IP or another port	type
Port		Туре	<u> </u>
LPT1:		Parallel Port	=
COM1:		Serial Port (9600:8N1)	
COM3:		Serial Port (9600:8N1)	
ET E.		Local Port	
USB00:	L	Virtual printer port for USB	
03000		virtual printer port for 035	-
		Create Port Configure Port.	
		< Back Next > Car	ncel





4. Enter a meaningful printer name or leave the default and select the **Next** button.

Seagull Driver Wizar	d 📃 🔀
Specify Printer Names are us	Name ed to identify the printer on this computer and on the network.
Enter a name for	this printer.
Printer name:	EasyCoder PD42 (203 dpi) - IPL
Use this printe	r as the <u>d</u> efault printer
Specify whether o sharing, you must	r not you want to share this printer with other network users. When provide a share name.
Oo not share t	his printer
○ Share name:	EasyCoder_PD42_(203_dpi)IPL
	< <u>B</u> ack Cancel

5. The drivers install.





6. Select the **Finish** button.

Seagull Driver Wizard		×
	Completin Wizard	g the Seagull Driver
	A new printer will b	e installed using the following settings:
	Name: Share name: Port: Default: Manufacturer: Model: Version:	EasyCoder PD42 (203 dpi) - IPL <not shared=""> USB001 No Intermec EasyCoder PD42 (203 dpi) - IPL 7.2.4 M-0 (01/16/2012)</not>
	To begin the driver	r installation process, dick Finish.





7. The driver installs.

Seagull Drive	er Wizard	×
Installin Pleas	ig Drivers se wait while your system is updated.	
1	Installing printer 'EasyCoder PD42 (203 dpi) - IPL'	
	< <u>B</u> ack Finish	Cancel





8. Select the Close button.

Seagull Driver Wizard	
	Seagull Driver Wizard Completed Successfully
	The following operations were completed successfully:
	Install Another Printer





Configuring the Intermec/Honeywell InterDriver

- 1. Go to Start > Printers and Faxes.
- 2. Right-click on the printer name entered in the "Installing using the Seagull Driver Wizard" section and select **Printer properties**.







3. Select the **Preferences...** button at the bottom of the **General** tab.

EasyCoder PD42 (203 dpi) - IPL Properties						
Fonts Tools About			t			
General	Sharing	Ports	Advanced	Color	Management	Security
	EasyC	oder PD42 (203 dpi) - IPL			
Location:						
<u>C</u> omment	t:					
M <u>o</u> del: - Features Color: 1	EasyCo s No	oder PD42 (2	203 dpi) - IPL Paper a	vailable	2:	
Double Staple:	-sided: No No					*
Speed: Maxim	Unknown um resolutio	n: 203 dpi				Ŧ
			Preferences		Print <u>T</u> est F	Dage
		ОК	Cancel		Apply	Help





4. Select the Advanced Options... button on the Page Setup tab.

🖶 EasyCode	r PD42 (203 dpi) - IPL Printing Preferences
Page Setup	Graphics Stock Options About
Stock	11CED (4.00 in v.2.00 in)
<u>In</u> ame.	New Edit Delete
- Provinu	
Freview	Portrait Migror Image
ALE	Landscape Negative Portrait 180°
+	○ Landscape 180°
Preset	
N <u>a</u> me:	<default settings=""> ▼ <u>M</u>anage</default>
	Advanced Options
	© 1998-2012 Seagull Scientific, Inc., Authors of the BarTender® label software.
	OK Cancel Apply Help





- 5. Select the **Passthrough** tab.
- 6. Select the Enable "Generic/Text Only" mode checkbox and choose the OK button.



7. Select the **OK** button on the next two dialog boxes to complete the process.





Configuring Internet Explorer

- 1. Login to DPAS.
- 2. Navigate to **AIT** > **Print Labels**.
- 3. *****IMPORTANT***** Print a label from Web DPAS.
- 4. Select the **Print Menu** at the top of Internet Explorer.
- 5. Select Page Setup.









- 6. Verify the Page Size is set to User defined.
- 7. Verify the **Orientation** is set to *Portrait*.
- 8. Uncheck the Enable Shrink-to-Fit checkbox.
- 9. Change the Left, Right, Top and Bottom Margin settings to 0. Margins may adjust after the OK button is selected.
- 10. Change all Header and Footer fields to -Empty-.
- 11. Select **OK** on the **Page Setup** dialog box.

Page Setup	
Paper Options Page Size: User defined Portrait Print Background Colors and Images Enable Shrink-to-Fit	Margins (inches) Left: 0 Bight: 0 I_op: 0 Bottom: 0
Headers and Footers <u>H</u> eader: -Empty-	Footer: ▼ -Empty- ▼
-Empty-	▼ -Empty- ▼
-Empty-	Empty-
Change Font	
	OK Cancel

12. You are now ready to print labels.

